


How to wire in, out, send and receive COSMO Cross Mixer

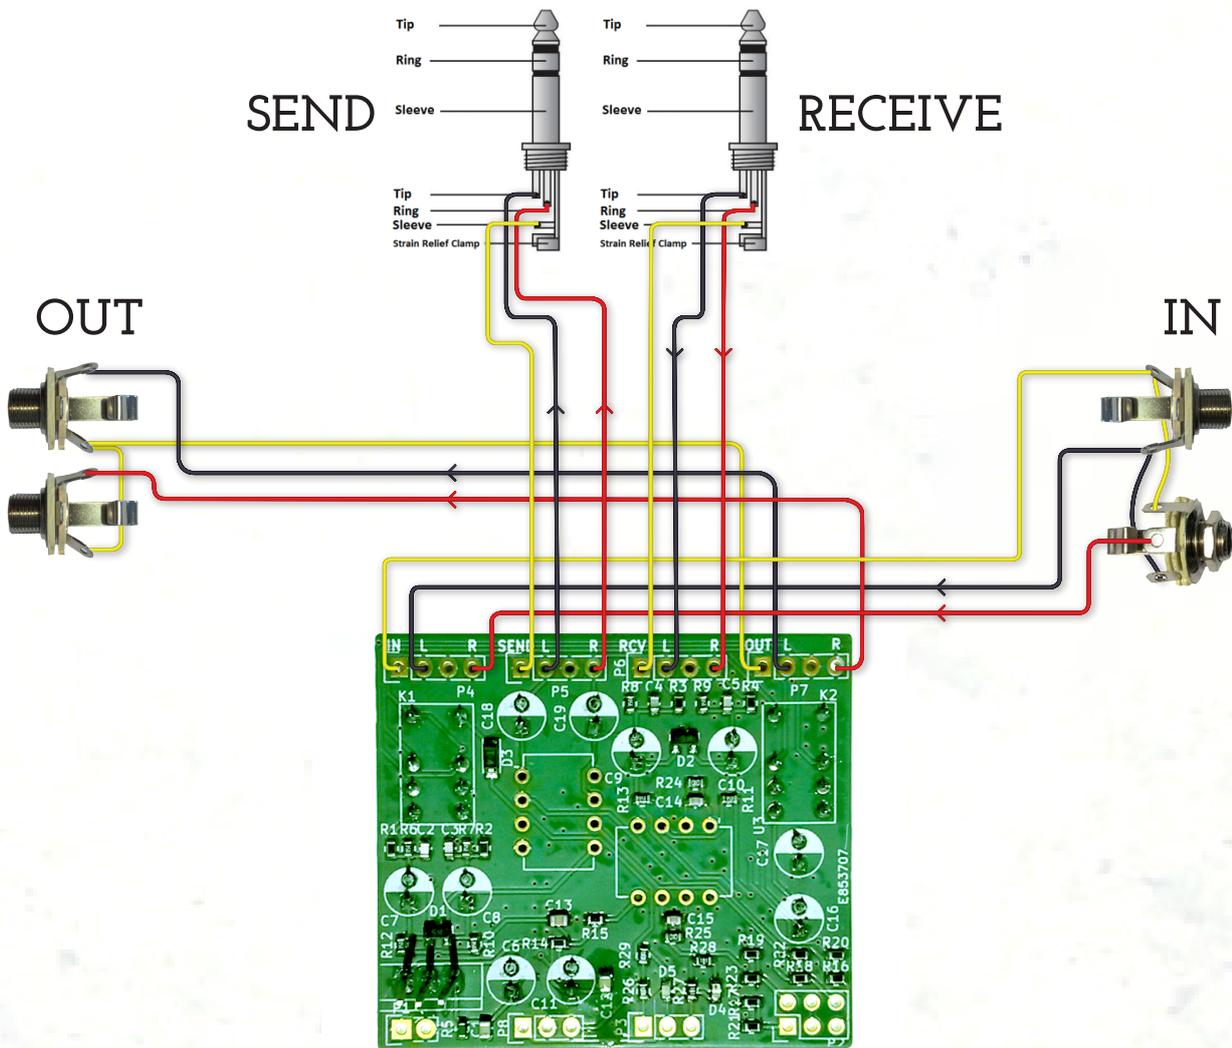

SEND and RECEIVE plugs should be 3,5mm jack ("minijack") plugs. SEND should be connected to input on the sound card and RECEIVE should be connected to the output on the sound card

NB!! The RIGHT IN Jack should be a switched Jack where the switched connection should be wired to the tip connection on the LEFT IN Jack. The tip connection on the RIGHT IN should be connected to IN R socket on the Cross Mixer. This wiring makes sure that you get output signal in both L and R even if you only connect a mono source to the LEFT IN